



CONSTANT LOAD WEIGHT

For Types 00 & 000

Part No. CLW-00



← Constant Load Weight

Constant Load Weight Installation:

1. Remove the dust cap located at the top of the dial indicator
2. Replace with Constant Load Weight (hand tight)

Note: Do not over tighten or damage can occur. Rex Gauge Durometer Models 1500, H-1000, and 2100 are not recommended for use with constant load weights.

If you have any questions or comments regarding the use of this or any Rex product, please call toll free at 1-800-927-3982.



REX GAUGE COMPANY, INC.

A DIVISION OF SCHULTES PRECISION MANUFACTURING

1250 Busch Parkway Buffalo Grove, IL 60089

800/927-3982

LOCAL: 847/465-9009 FAX: 847/465-9229

www.durometer.com